

VANGUARD V.34 Daughtercard HARDWARE ADVISORY NOTICE

Introduction

This notice describes how to install a Vanguard V.34 Daughtercard in Vanguard products.

Installation and Configuration

This card is installed in any Vanguard product capable of supporting daughtercards. For complete configuration information, please refer to the *3460 Fast'R User Guide* (Part No. T0022-01). Figure 1 shows the 3460 Fast'R V.34 Daughtercard.

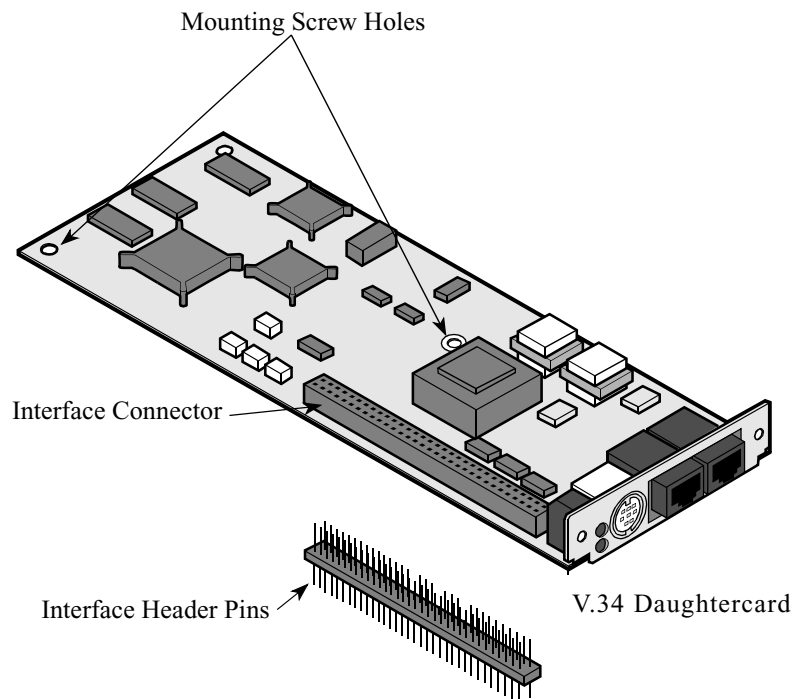 


Figure 1. 3460 V.34 Daughtercard

Figure 1, and this table, illustrate how to replace the Vanguard V.34 daughtercard.



Step	Action	
1	Unplug the power cord from the primary power source and remove interface and power cables.	
2	Remove the top cover and front door of the Vanguard.	
3	<i>If you are...</i>	<i>Then...</i>
	Adding a daughtercard	Connect the 68-pin interface header onto the motherboard.
	Replacing an existing daughtercard	a) Remove the daughtercard mounting screws that attaches the daughtercard to the board. b) Unscrew the two rear panel coverplate screws. Unplug the existing daughtercard. If no daughtercard is installed, remove the metal blanking plate. c) Align the standoff on the motherboard with the hole on the new daughtercard.
4	Push the daughtercard down into the connector being careful to align the pins. ■ Note Do not apply excessive pressure when pushing the daughtercard into the connector or you may damage the card.	
5	Fasten the screw that attaches the daughtercard to the motherboard, then fasten the two rear panel coverplate screws. Daughtercard replacement/addition is complete.	
6	Replace the top cover and front door, snapping them together.	
7	Reconnect the interface and power cables.	
8	Power on the unit.	

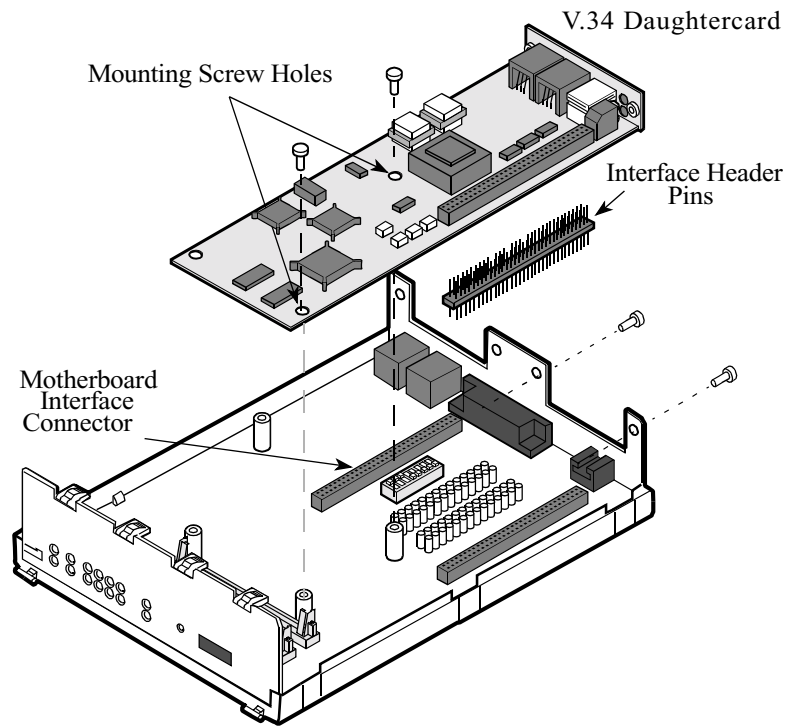 


Figure 2. 3460 V.34 Daughtercard Installation

VANGUARD V.34 Daughtercard HARDWARE ADVISORY NOTICE

Introduction

This notice describes how to install a Vanguard V.34 Daughtercard in Vanguard products.

Installation and Configuration

This card is installed in any Vanguard product capable of supporting daughtercards. For complete configuration information, please refer to the *3460 Fast'R User Guide* (Part No. T0022-01). Figure 1 shows the 3460 Fast'R V.34 Daughtercard.

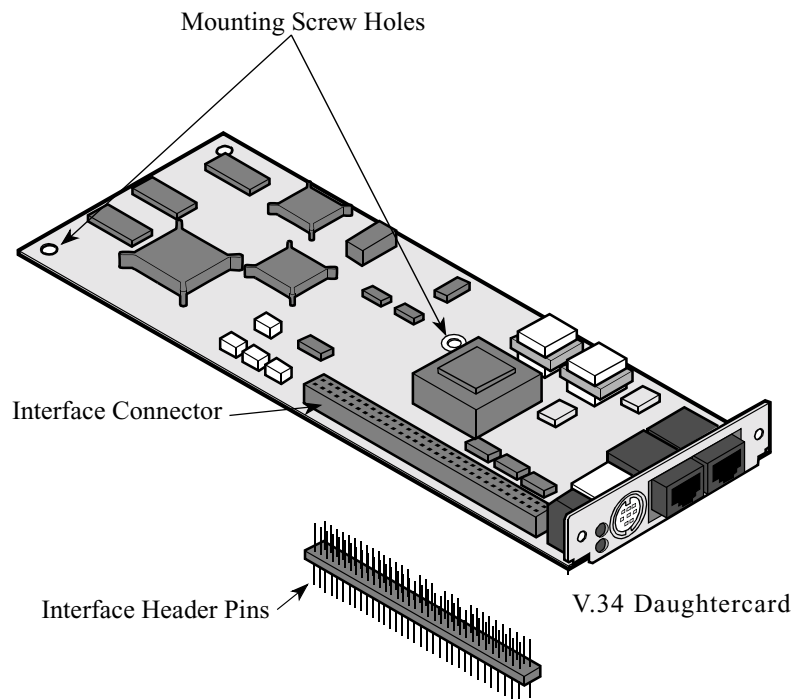 


Figure 1. 3460 V.34 Daughtercard

Figure 1, and this table, illustrate how to replace the Vanguard V.34 daughtercard.



Step	Action	
1	Unplug the power cord from the primary power source and remove interface and power cables.	
2	Remove the top cover and front door of the Vanguard.	
3	<i>If you are...</i>	<i>Then...</i>
	Adding a daughtercard	Connect the 68-pin interface header onto the motherboard.
	Replacing an existing daughtercard	<ul style="list-style-type: none"> a) Remove the daughtercard mounting screws that attaches the daughtercard to the board. b) Unscrew the two rear panel coverplate screws. Unplug the existing daughtercard. If no daughtercard is installed, remove the metal blanking plate. c) Align the standoff on the motherboard with the hole on the new daughtercard.
4	Push the daughtercard down into the connector being careful to align the pins. ■ Note Do not apply excessive pressure when pushing the daughtercard into the connector or you may damage the card.	
5	Fasten the screw that attaches the daughtercard to the motherboard, then fasten the two rear panel coverplate screws. Daughtercard replacement/addition is complete.	
6	Replace the top cover and front door, snapping them together.	
7	Reconnect the interface and power cables.	
8	Power on the unit.	

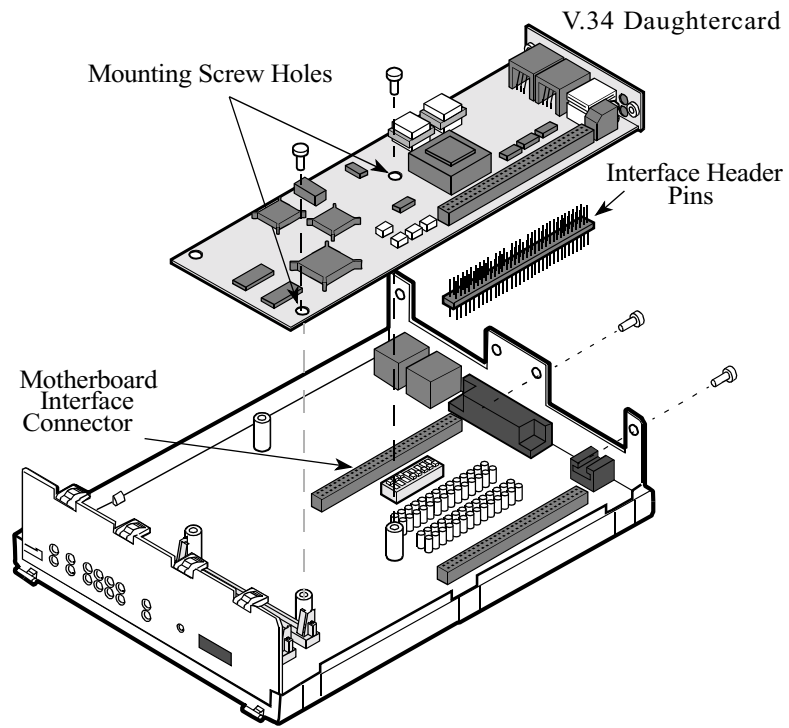 


Figure 2. 3460 V.34 Daughtercard Installation
